 


NT-2020 1D Ominidirectional Barcode scanner

Configuration Steps

 
For Factory Restore there are two steps

Step 1: Read the 'Enter Setup' barcode

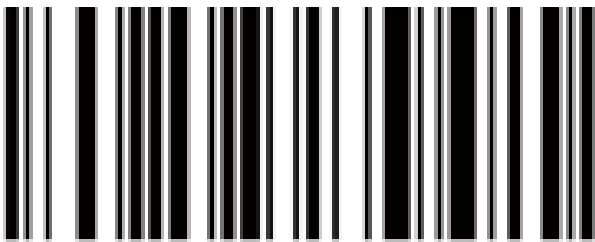

Enter Setup

Step 2: Read the 'Factory Reset' barcode

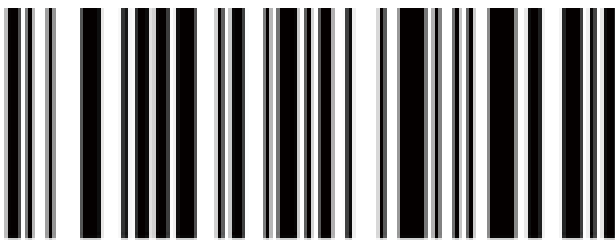


Factory Reset

For other configuration there are three steps


For example if you want to enable the scanner to read Code 11 follow below 3 steps

 Step 1 Read the 'Enter Setup' barcode

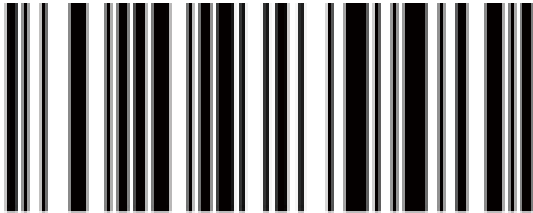


Enter Setup

 Step 2 Read ' Enable Code 11 ' barcode

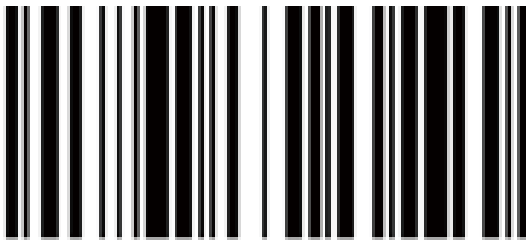


Enable Code 11

 Step 3 Read the 'Exit with Save' barcode

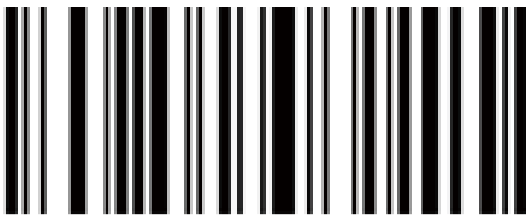


Exit with Save

 Communication Mode

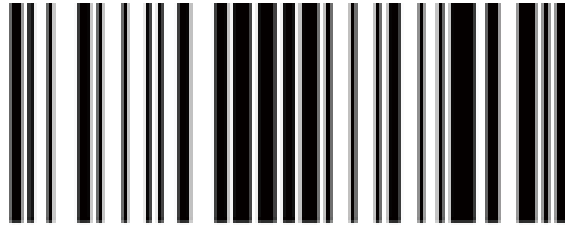


USB KBW (Default)

 Turn On / Off Beep Sound

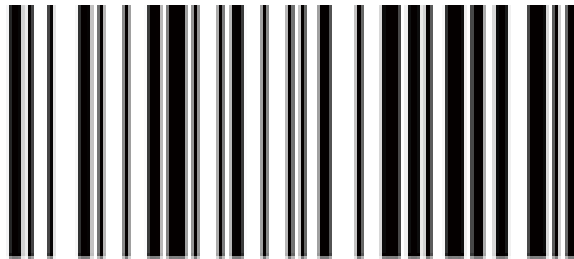


Enable Beep Sound

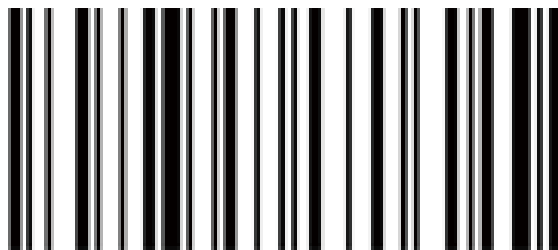 


Disable Beep Sound

 
Interval Time Setting

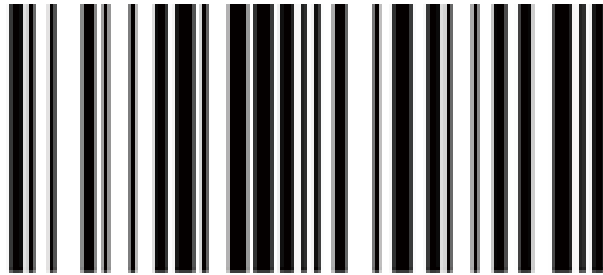

Interval time-10min

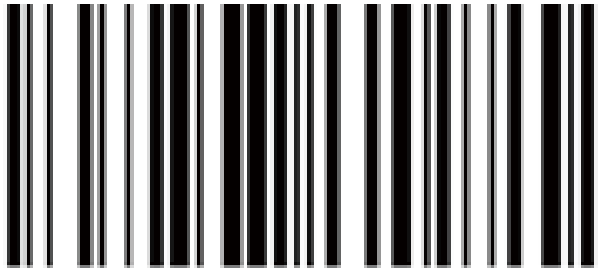 


Interval time-20min

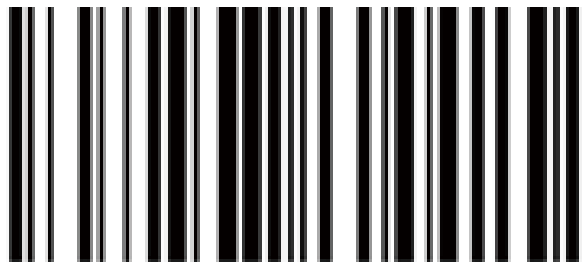 


Interval Time-30min

 
Terminator Setting

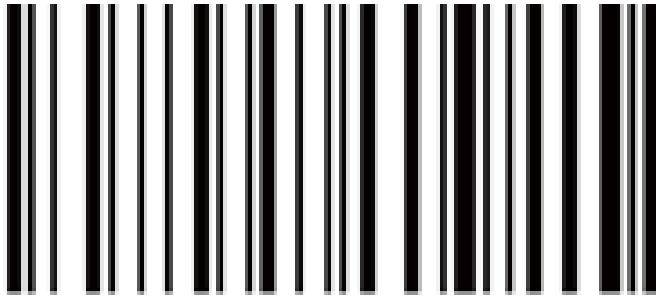


Enter

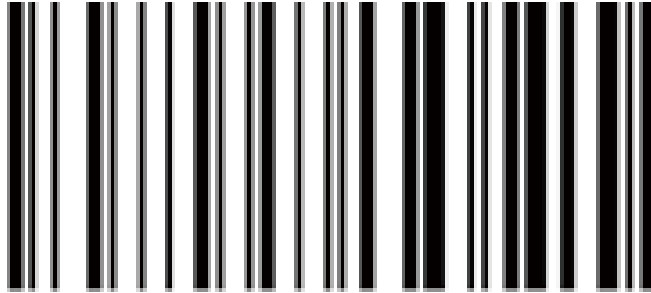 


TAB

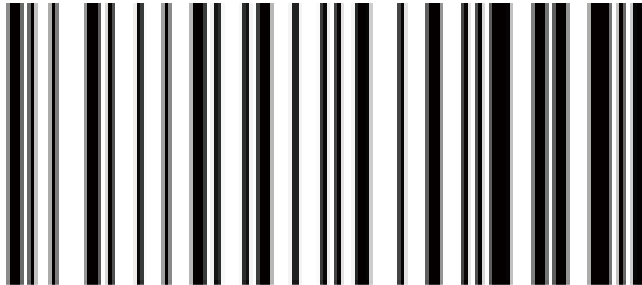 


None

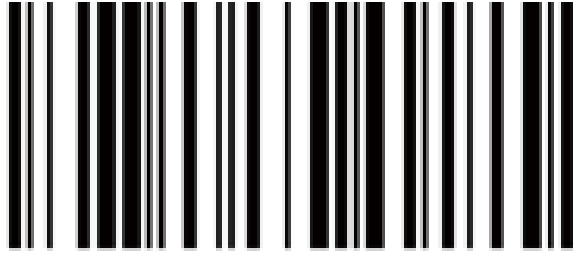 


Enable UPC-A

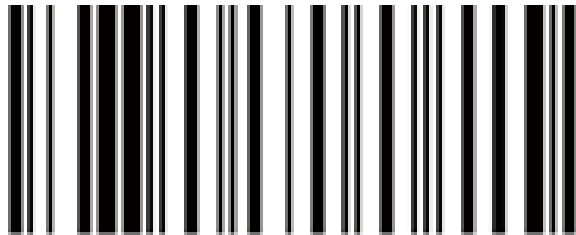 


Disable UPC-A

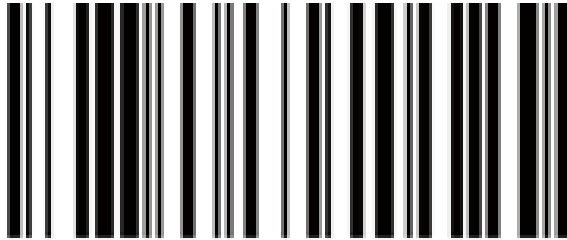 


Convert UPC-A to EAN-13

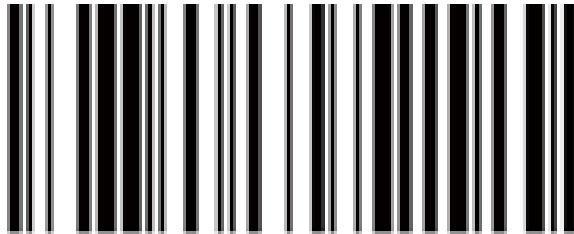 


Do not Convert UPC-A to EAN-13

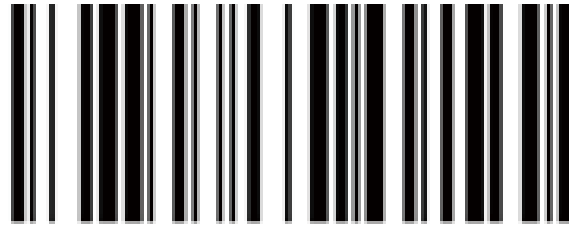 


Enable UPC-E

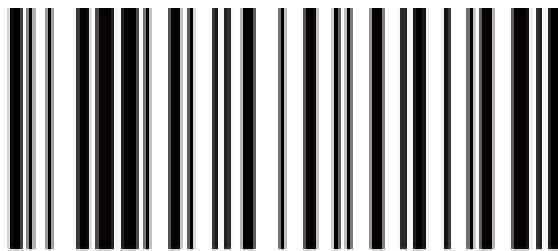 


Disable UPC-E

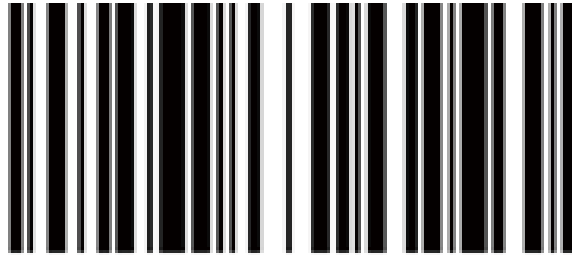 


Enable EAN-13

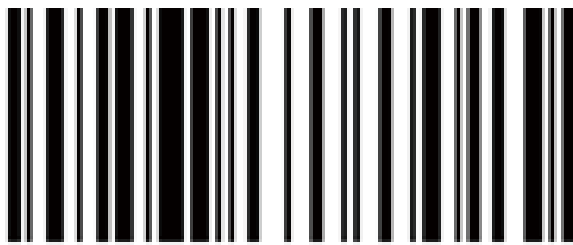 


Disable EAN-13

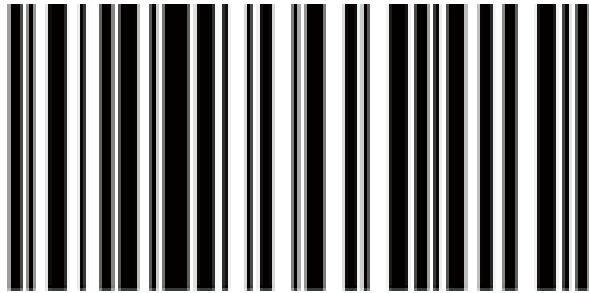 


Convert EAN-13 to ISBN

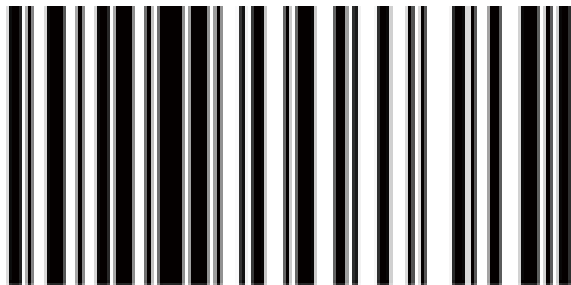 


Do not Convert EAN-13 to ISBN

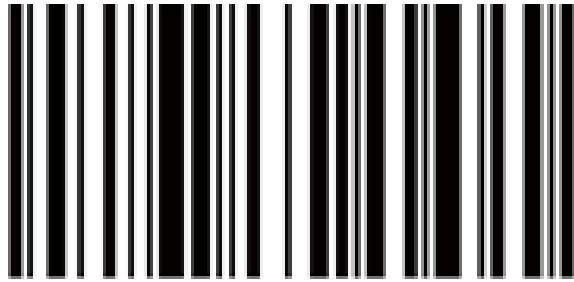 


Enable EAN-8

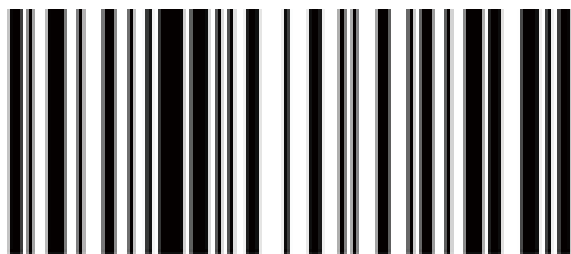 


Disable EAN-8

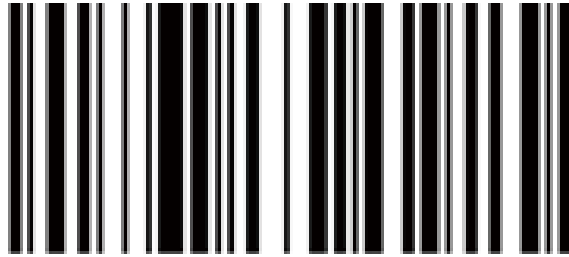 


Enable CODE39

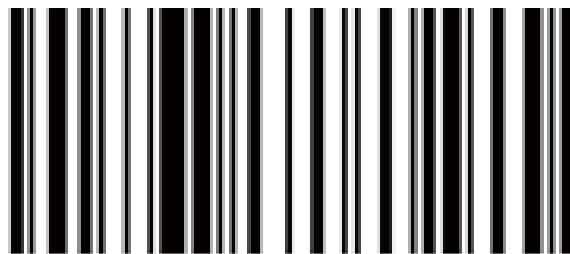 


Disable CODE39

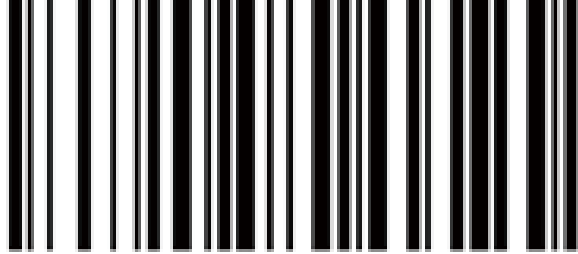 


Enable Interleaved 2 of 5

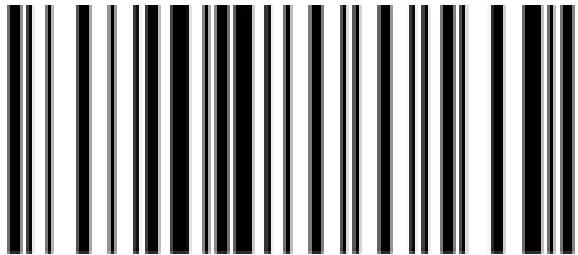 


Disable Interleaved 2 of 5

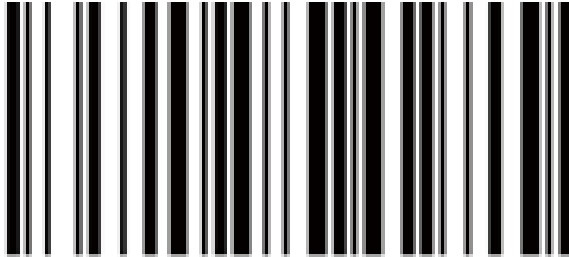 


Enable Industrial 2 of 5

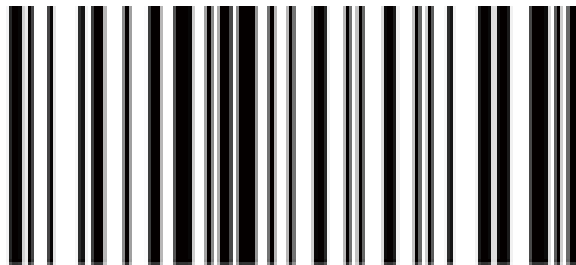 


Disable Industrial 2 of 5

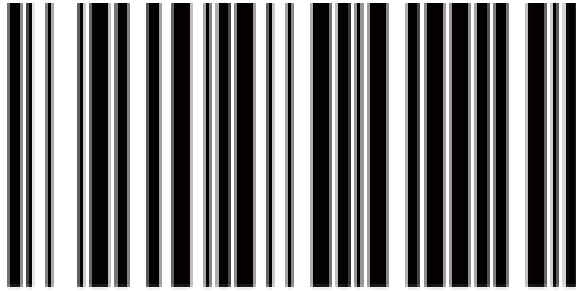 


Enable Matrix 2 of 5

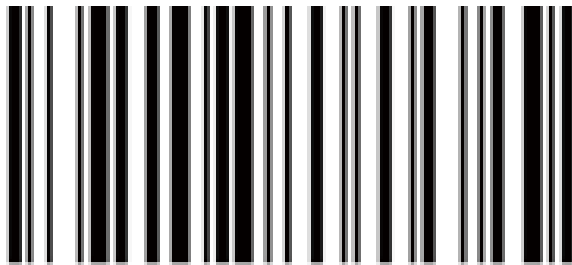 


Disable Matrix 2 of 5

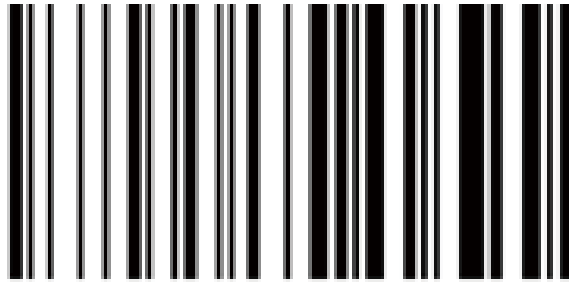 


Enable CodaBar

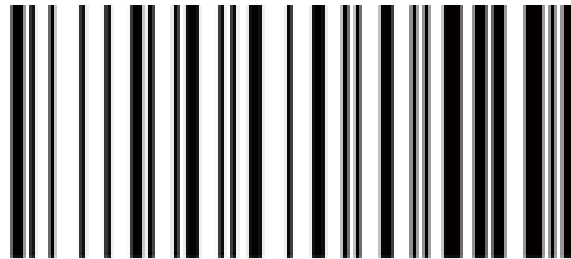 


Disable CodaBar

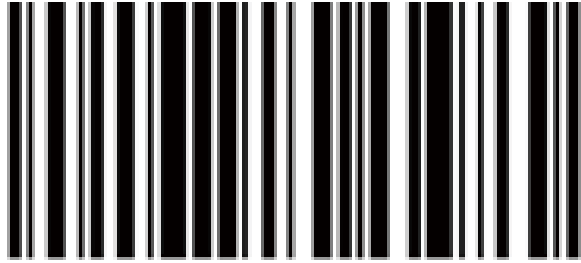 


Enable Code 128

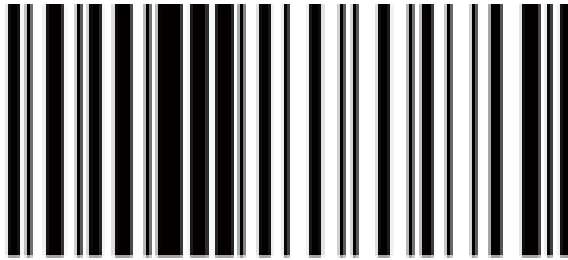 


Disable Code 128

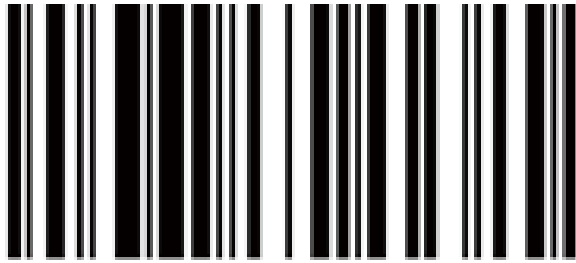 


Enable Code 93

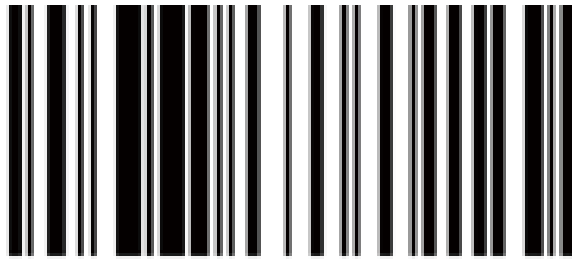 


Disable Code93

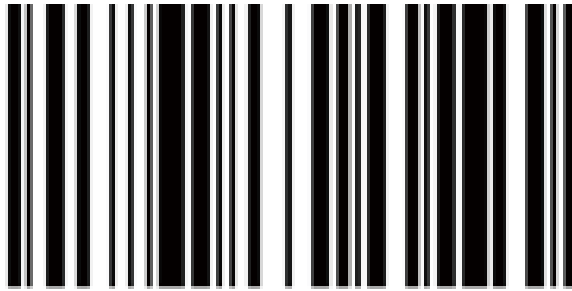 


Enable Code 11

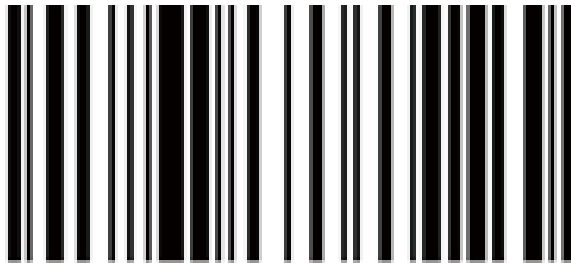 

Disable Code 11

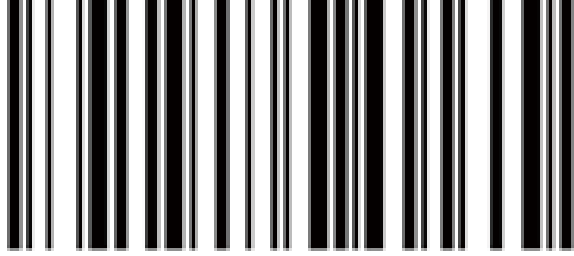 

Enable Code MSI

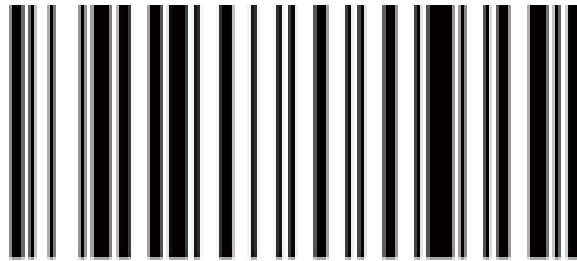 

Disable MSI