

### Factory default configuration

Scan the following bar code can be returned to the factory default configuration.



Factory default configuration

### Suffix Setting



Cancel / Enter+Tab



Add Enter



Add Enter+Tab ( Default )

### Codabar



Enable Codabar



Disable Codabar

### Code 39



Enable Code 39



Disable Code 39

**Code 39 check digit**



Disable Code 39 Check digit



Enable Code 39 check but Disable transit



Enable Code 39 check and transit check digit

**Code 32**



Enable Code 32



Disable Code 32

### Interleaved 2 of 5 (ITF25)



Enable ITF25



Disable ITF25

### Interleaved 2 of 5 (ITF25) length



ITF25 random length (4-24) (default)



ITF25 Length of 6 Digits



ITF25 Length of 8 Digits



ITF25 Length of 10 Digits



ITF25 Length of 12 Digits



ITF25 Length of 14 Digits



ITF25 Length of 16 Digits

**Code 93**



Enable Code 93



Disable Code 93

**Code 128**



Enable Code 128



Disable Code 128

**GS1-128**



Enable GS1-128



Disable GS1-128

**UPC-A**



Enable UPC-A





Disable UPC-A

### UPC-A check digits



Send UPC-A checkdigits ( default )



Don't send UPC-A check digits

### UPC-E



Enable UPC-E



Disable UPC-E

### UPC-E check digits



Send UPC-E check digits ( default )



Don't send UPC-E check digits

### EAN/JAN-8



Enable EAN/JAN-8



Disable EAN/JAN-8

### **EAN/JAN-13**



Enable EAN/JAN-13



Disable EAN/JAN-13

### **UPC/EAN/JAN Addendum code**



Ignore UPC/EAN/JAN Addendum code ( default ) 3



Decode UPC/EAN/JAN Addendum code



Self-induction UPC/EAN/JAN Addendum code

**EAN13to ISBN**



Enable EAN13to ISBN



Disable EAN13 to ISBN ( default )

**EAN13 to ISSN**



Enable EAN13 to ISSN



Disable EAN13 to ISSN ( default )

**GS1 DataBar ( RSS14 )**



Enable GS1 Data Bar



Disable GS1 DataBar

**GS1 DataBar Limited**



Enable GS1 Data Bar Limited



Disable GS1 Data Bar Limited

**GS1 Data Bar Expanded**



Enable GS1 Data Bar Expanded



Disable GS1 Data Bar Expanded

**PDF417**



**Enable PDF417**

 


**Disable PDF417**

**QR Code**



**Enable QR**



**Disable QR**

**Micro QR**



**Enable Micro QR**



**Disable Micro QR**

**Micro QR**



**Enable Data Matrix**



**Disable Data Matrix**



**Aztec Code**



**Enable Aztec**



**Disable Aztec**