


# Ominidirectional desk Scanner Overview

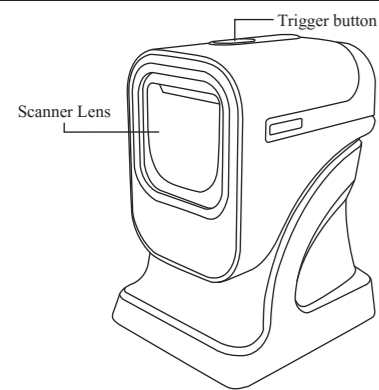

## Interface Mode

Scan the following bar code can be configured as the USB keyboard scanning mode.



USB (default)

## Enable / Disable configuration code

Enable the configuration code before you do other configurations



Enable configuration code (Default)



Disable configuration code

1

## Factory default configuration

Scan the following bar code can be returned to the factory default configuration.



Factory default configuration

## Product user configuration

Scan the following bar code to save the current parameters of the product to the user configuration.



Save user configuration

Scan the following bar code to recovery the user configuration.



Recovery user configuration

## The RS232 baud rate configuration



Baud rate 4800



Baud rate 9600 (Default)



Baud rate 19200

2



Baud rate 38400



Baud rate 57600



Baud rate 115200

## Scan Mode

### Disable Auto-Sensing Scan Mode

When the auto-sensing scan mode is configured to be closed, you can trigger the button on top of scanner to scan the barcodes.



Disable auto-sensing scan Mode (Default)

### Enable Auto-Sensing Scan Mode

When the self-sensing scan mode is configured to be open, the scanner can decode automatically when barcodes close to the scanner lens.



Enable auto-sensing scan Mode

## Screen Reading Mode

When you turn on this mode, scanner can be able to decode codes from phone or computer directly. However turning on this mode will cause low speed on scanning codes from paper. Screen reading mode is turned off by default.



Disable screen reading mode (Default)

3



Enable screen reading mode

## Suffix Setting



Cancel / Enter+Tab



Add Enter



Add Tab



Add Enter+Tab (Default)

## BUZZER volume



Volume-low



Volume-high (default)

Successful Decoding Tone ON/OFF

4

For any inquiries or comments concerning our products, please send an email to service@gzxlscan.com, and we will respond to you as soon as possible.

## Contact Information:

Tel.: +0086 20-6626-0708

Email: service@gzxlscan.com

Web: www.gzxlscan.com

Addr.: Unit 137, The Pacific Industry Park, Xintang Town, Zengcheng District, Guangzhou, China/511340

Made in China

# NETUM

## Ominidirectional 2D Desk Scanner

Note: The device is not equipped with the charger, please charge the device via USB output charging equipment.

v1.4-s



Off



On (default)

## Error Warning



Volume-low (default)



Volume-middle



Volume-high

## LED Indicating Lamp



Successful decoding LED light off



Successful decoding LED light on

5



500ms



700ms (default)



1S



2S

## USB keyboard transfer speed

The speed of transferring data using USB connecting mode. To obtain accuracy of the data transmission, if the PC performance is poor relatively, slow transfer speed is suggested.



Slow (default)



Middle



Fast

6



Enable all bar codes



Disable all bar codes

## Codabar



Enable Codabar



Disable Codabar



Disable transit Codabar began/over CH (default)



Transit Codabar began/over CH

## Code 39



Enable Code 39



Disable Code 39

7

## Code 39 check digit



Disable Code 39 Check digit (default)



Enable Code 39 check but Disable transit



Enable Code 39 check and transit check digit

## Code 32 (code 39 opening needed)



Enable Code 32



Disable Code 32

## Interleaved 2 of 5 (ITF25)



Enable ITF25



Disable ITF25

8

## Interleaved 2 of 5 (ITF25) length



ITF25 random length (4-24) (default)



ITF25 Length of 6 Digits




ITF25 Length of 8 Digits




ITF25 Length of 10 Digits



ITF25 Length of 12 Digits

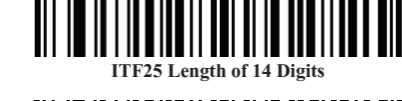

ITF25 Length of 14 Digits

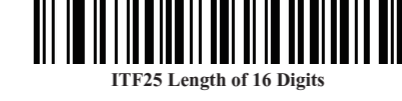

ITF25 Length of 16 Digits

9



ITF25 Length of 18 Digits



ITF25 Length of 20 Digits



ITF25 Length of 22 Digits



ITF25 Length of 24 Digits

## Industrial 2 of 5 (4-24)



Enable Industrial 2 of 5



Disable Industrial 2 of 5

10

## Code 93



Enable Code 93



Disable Code 93

## Code 128



Enable Code 128



Disable Code 128

## GS1-128



Enable GS1-128



Disable GS1-128

## UPC-A



Enable UPC-A

11



Disable UPC-A

## UPC-A check digits



Send UPC-A checkdigits (default)



Don't send UPC-A checkdigits

## UPC-E



Enable UPC-E



Disable UPC-E

## UPC-E check digits



Send UPC-E check digits (default)



Don't send UPC-E check digits

12

## EAN/JAN-8



Enable EAN/JAN-8



Disable EAN/JAN-8

## EAN/JAN-13



Enable EAN/JAN-13



Disable EAN/JAN-13

## UPC/EAN/JAN Addendum code



Ignore UPC/EAN/JAN Addendum code (default) 3



Decode UPC/EAN/JAN Addendum code



Self-induction UPC/EAN/JAN Addendum code

13

## EAN13to ISBN



Enable EAN13to ISBN



Disable EAN13 to ISBN (default)

## EAN13 to ISSN



Enable EAN13 to ISSN



Disable EAN13 to ISSN (default)

## GS1 DataBar (RSS14)



Enable GS1 Data Bar



Disable GS1 DataBar

14

## GS1 DataBar Limited



Enable GS1 Data Bar Limited



Disable GS1 Data Bar Limited

## GS1 Data Bar Expanded



Enable GS1 Data Bar Expanded



Disable GS1 Data Bar Expanded

## PDF417



Enable PDF417



Disable PDF417

## QR Code



Enable QR

15



Disable QR

## Micro QR



Enable Micro QR



Disable Micro QR

## Micro QR



Enable Data Matrix



Disable Data Matrix

## Aztec Code



Enable Aztec



Disable Aztec

16